

## Installing a V-Line Closet Vault



1. Check desired wall location for wiring and plumbing that could mater. Locate and mark studs & close stud spacing.



6. Slide Closet Vault into cut out.



2. Measure desired height location.



7. Pre-drill holes into studs for screws. Fasten lag screws through Vault into stud, minimum recommended screw size 1/4" x 1". Screw size may vary depending on location.




3. Draw out level lines to cut wall 14" wide x 50" high.



8. Install interior options. Check to be sure shelves and accessories do not interfere with lock and door closing.



4. Cut dry wall in between wall studs.

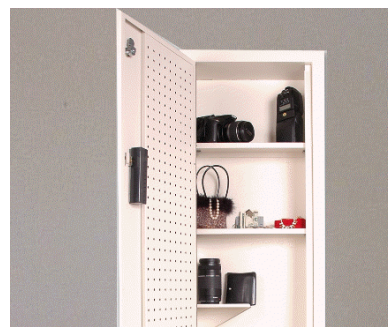

9. Set your personal combination.

Enjoy your V-Line Closet Vault.

For complete concealment hang a picture over the Closet Vault.



5. Clean out opening of drywall dust.

[vlineind.com](http://vlineind.com)

370 Easy St.  
Simi Valley, CA 93065

Phone (805) 520-4987  
Fax (805) 520-6470